

**PINK PROVIDES:**

- 1 6' Asterix Fabric
- 9 5' Fiberglass Rods
- 3 4' Fiberglass Rods
- Extra Rods
- Extra Brass Couplings
- Extra White End Caps

**YOU PROVIDE:**

- Site Plan/Event Layout
- Two Person Team
- Zip-Ties
- Shears or Diagonal Cutters
- Plastic Drop Cloth
- Tie line for rigging
- Gloves
- Sewing Kit



Additional Support Please Call:  
212-253-6666 or  
After Hours: 646-853-3900

Be sure to have these pieces near the final location.

5' Fiberglass Rod




4' Fiberglass Rod




Prior to assembly, lay out drop cloth in designated work location. Before working with fabric, wash hands or put on gloves. Use caution when working with fiberglass. Wear gloves to protect from splinters.


1. Locate one of the 5' rods. Insert the end without the brass coupling into the opening in the runner, which is located near the cross section.

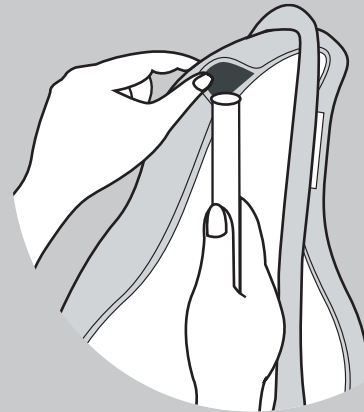

2. With the brass coupling end pointing down, feed fabric onto the rod. Bunch fabric together and then stretch over rod.

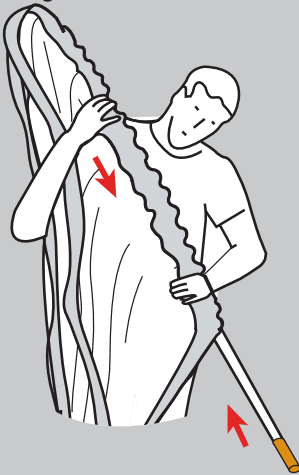


3. Have the other person apply pressure to both ends to bend pipe while stretching the fabric around. Be careful not to insert rod past brass coupling.

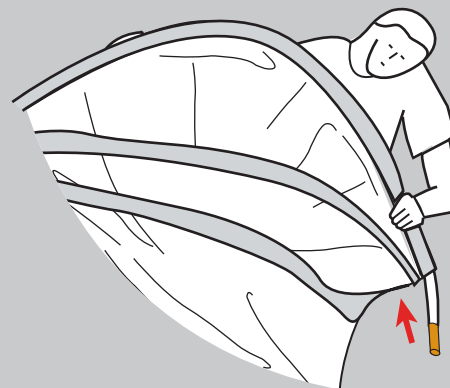

Any and all rights (including, without limitation, copyright, design patent, use patent and trademark) in and to all designs, concepts, renderings, or graphics (collectively, "Design") represented in this document were created by Moss Inc. and remain the sole and exclusive property of Moss Inc. Use of any such Design by the recipient without required purchase is strictly prohibited. ©2010


4. Connect the open end of another 5' rod into the brass coupling of the first rod. Continue feeding the rod into the fabric.

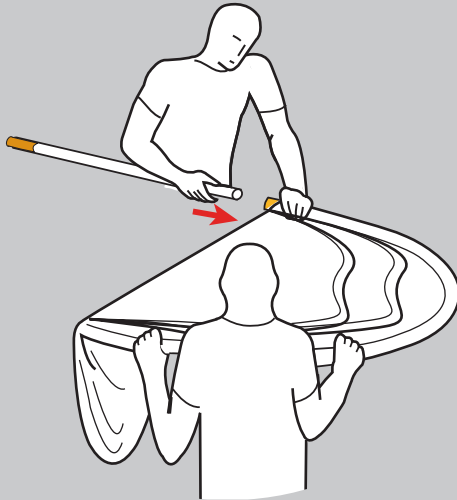


5. The person who is not feeding the rod into the runner will need to grasp the fabric and pull it out in front of the advancing rod.



6. Repeat steps 3 - 5 until one more 5' rod and a 4' rod are inserted. When the last one is inserted, the front of the first piece and the end of the last piece should be near one another inside the fabric.

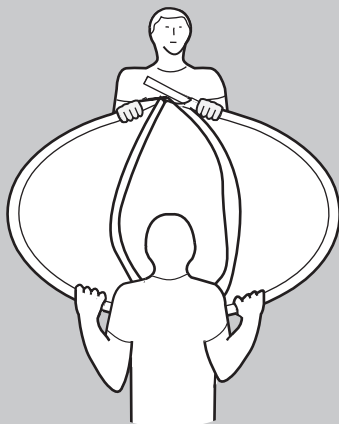


7. Feeling through the fabric, align the brass coupling end and the open end of the rod so that they meet. This will complete one section.

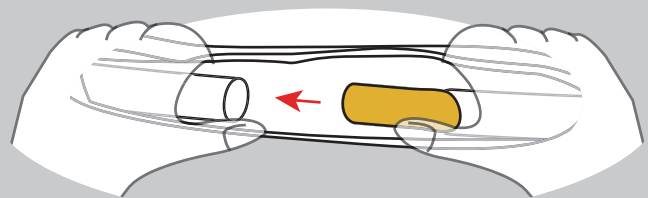


Repeat steps 1 - 7 two more times until all the rods are inserted into the Asterix. Feeding the rods will become easier as the form takes shape.

Any and all rights (including, without limitation, copyright, design patent, use patent and trademark) in and to all designs, concepts, renderings, or graphics (collectively, "Design") represented in this document were created by Moss Inc. and remain the sole and exclusive property of Moss Inc. Use of any such Design by the recipient without required purchase is strictly prohibited. ©2010

8. The Asterix is complete.

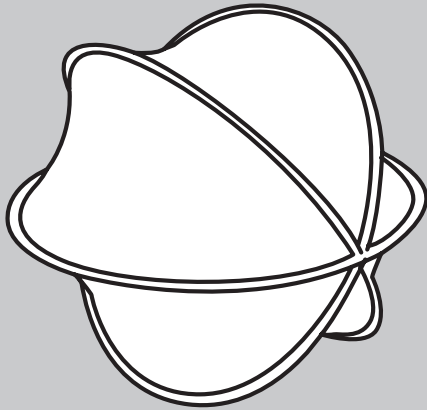

9. If rigging, attach tie line to the cross section.

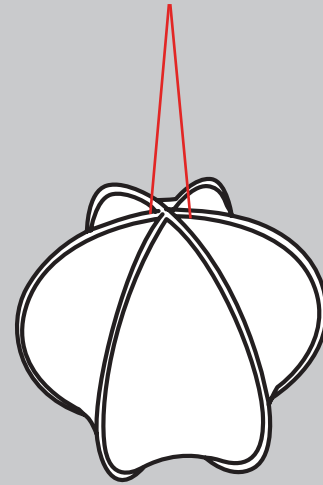

Note on disassembly:

Slide the rods so that the coupling aligns with the opening. Then pull apart.

To remove rods, slide the fabric back around the rods. Be careful not to pull a rod out of the runner leaving the other rods stranded.

Check fabric for stains before returning to the bag.

Fiberglass precautions:

- \* Do not run hand along rod;
  - \* Wear gloves;
  - \* Handle gently to avoid breaking rod.
- If you get a fiberglass splinter:
- \* Wash hands with soap and water;
  - \* Treat as a splinter.
- If a fiberglass rod breaks:
- \* Do not re-use; throw away;
  - \* Replace with an extra provided.